


INSTRUCTIONS MONTAGE

MF

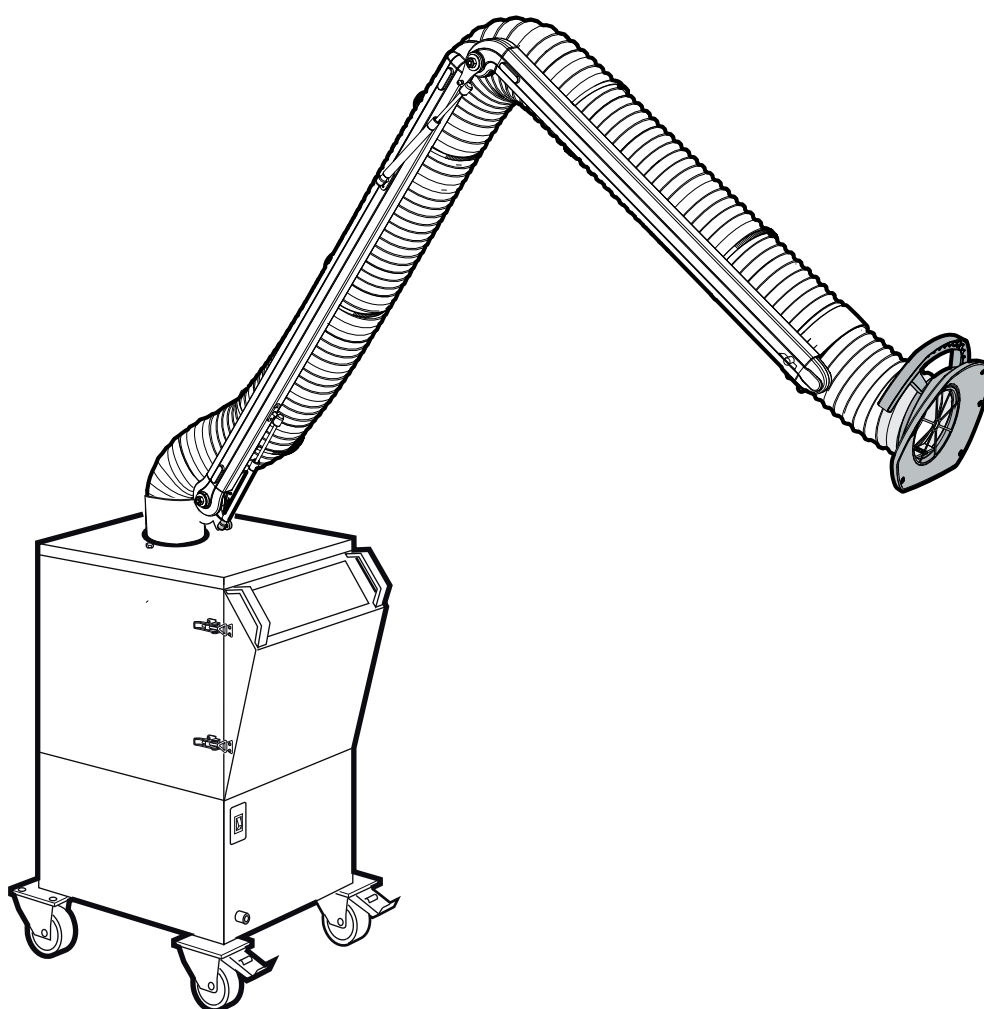


03/02/2016

SOUS RÉSERVE DE MODIFICATION SANS PRÉAVIS


AÉRAULIQUE · THERMIQUE · INDUSTRIE · BÂTIMENT

11 rue Jean Mermoz BP 28103 · 44981 S^{te} Luce/Loire Cedex · Tél : 02 51 85 09 49 · Fax : 02 40 25 76 66 · www.atib.fr · contact@atib.fr


1

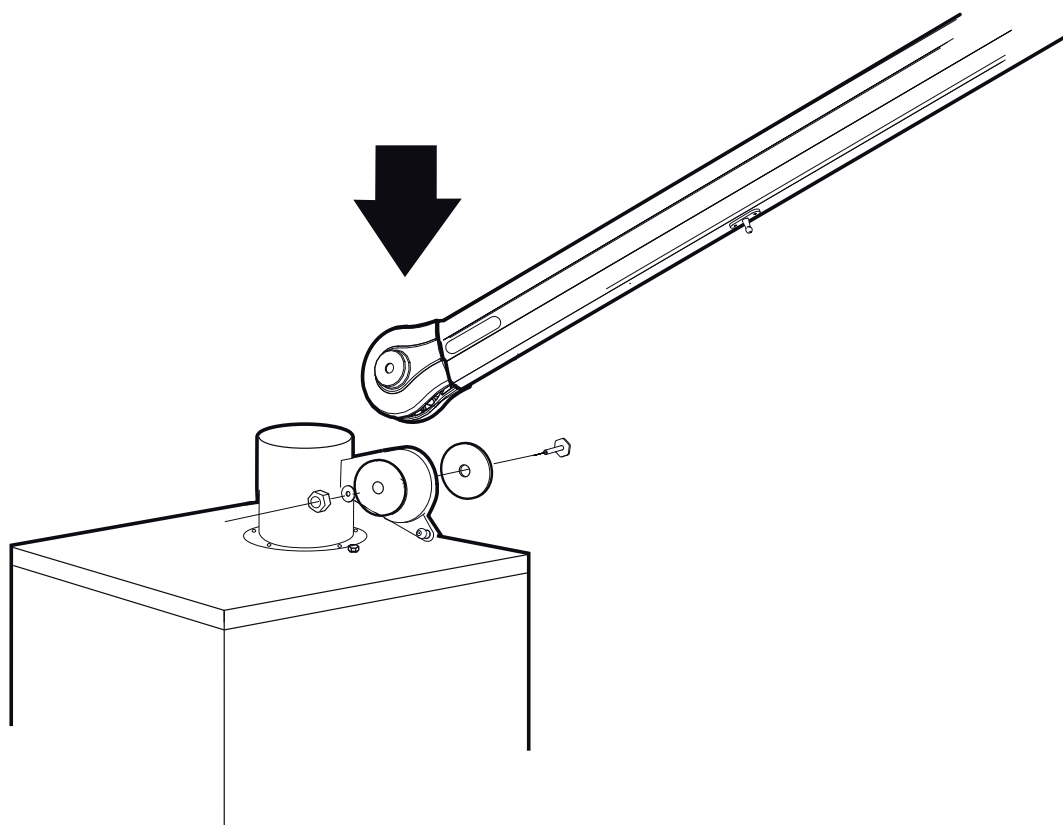



2

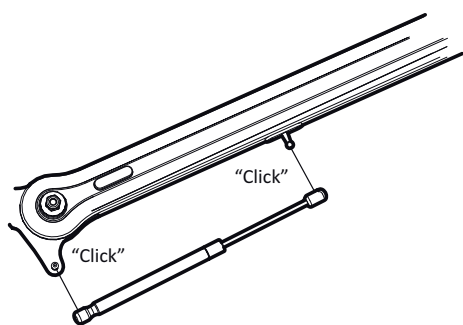

3

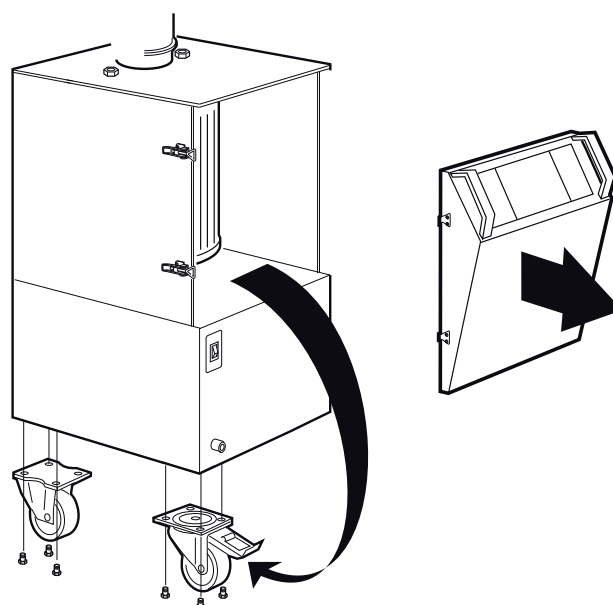

4

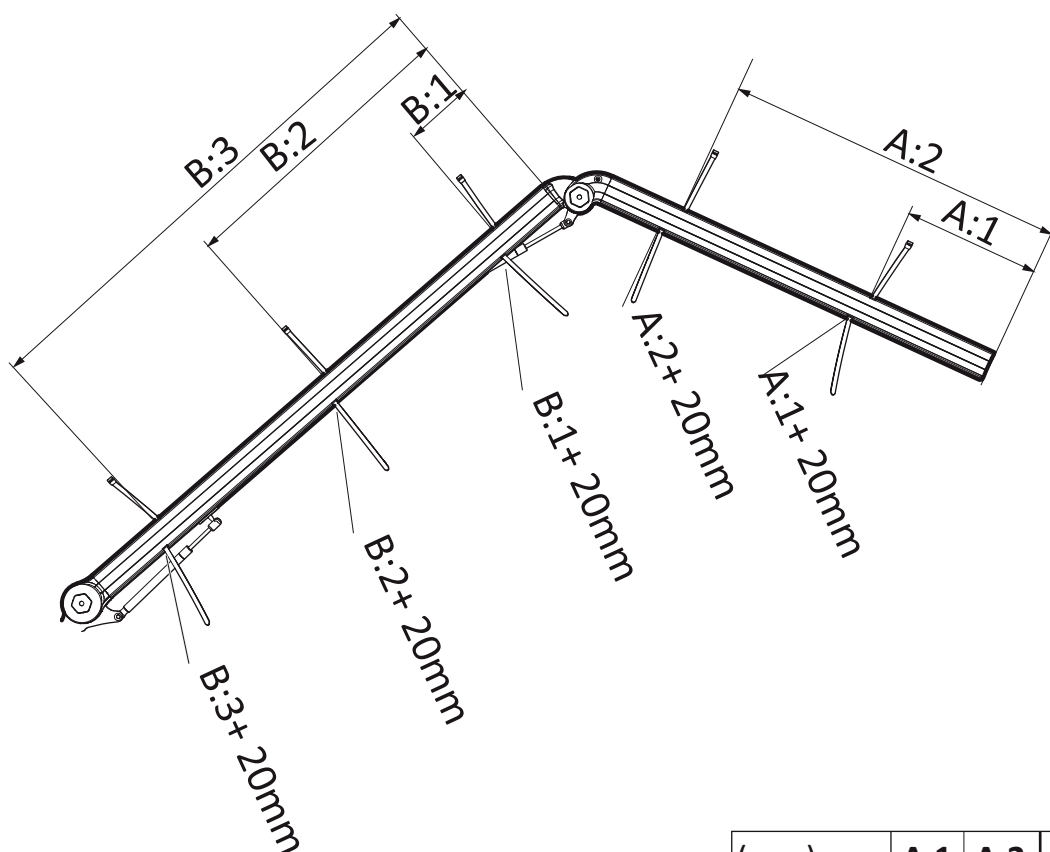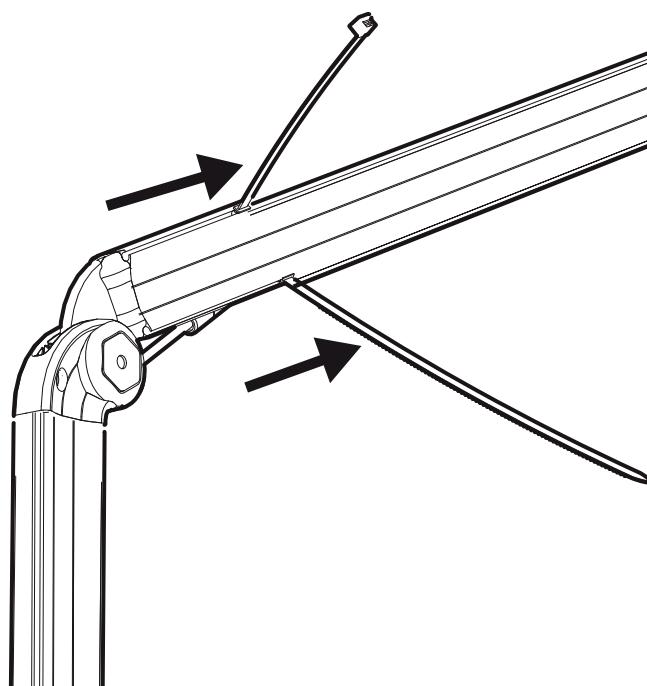

(mm)	A:1	A:2	B:1	B:2	B:3
MF 2000	290	-	200	580	-
MF 3000	420	780	200	650	1080

