

NOTICE DE MONTAGE

MPC F400-120



CONTENTS

| | |
|--|----|
| 1. FOREWORD | 2 |
| 2. IMPORTANT INFORMATION | 2 |
| 3. GENERAL SAFETY INSTRUCTIONS | 3 |
| 4. ADHERE TO THE FOLLOWING INSTRUCTIONS | 5 |
| 5. PRODUCT INFORMATION | 6 |
| 6. NAMEPLATE | 7 |
| 7. TECHNICAL DATA | 8 |
| 8. DIMENSIONS | 8 |
| 9. DATA IN ACCORDANCE WITH ERP DIRECTIVE 327/2011 OF THE EUROPEAN PARLIAMENT | 9 |
| 10. TRANSPORT AND STORAGE | 10 |
| 11. ASSEMBLY | 10 |
| 12. ELECTRICAL CONNECTION | 13 |
| 13. COMMISSIONING | 16 |
| 14. MAINTENANCE AND CLEANING | 16 |
| 15. LIFETIME AND DISPOSAL | 17 |
| 16. TROUBLESHOOTING | 18 |

MPC F400-120

1. FOREWORD

Dear customers,

Thank you very much for choosing ruck Ventilatoren GmbH.

Before operating the unit, please read carefully these installation, operating and maintenance instructions. If you have any questions, please contact:

ruck Ventilatoren GmbH
Max-Planck-Str. 5
D-97944 Boxberg-Windischbuch
Tel. +49 (0)7930 9211-300
Fax +49 (0)7930 9211-166
info@ruck.eu
www.ruck.eu

certified ISO 9001:2015 (51017552)

The data provided in these installation, operating and maintenance instructions are for the product description only. A statement about a certain condition or a suitability for a certain application cannot be derived from our information. The information does not release the user from his own assessments and examinations.

All rights belong to ruck Ventilatoren GmbH, also in the case of industrial property rights applications. Any disposal such as copying and distribution rights lies with us.

The title page shows an example configuration. The delivered product may therefore differ from the illustration.

The original instructions were created in the German language.

Information updated print 05.02.2019

Subject to change

2. IMPORTANT INFORMATION

This manual contains important information on the safe and appropriate assembly, transport, commissioning, operation, maintenance, disassembly and simple troubleshooting of the product.

The product has been manufactured according to the accepted rules of current technology.

There is, however, still a danger of personal injury or damage to equipment if the following general safety instructions and the warnings before the steps contained in these instructions are not complied with.

- Read these instructions completely and thoroughly before working with the product.
- Keep these instructions in a location where they are accessible to all users at all times.
- Always include the operating instructions when you pass the product on to third parties.

2.1. Applicable Documents

The following documents and information on the exhaust fan must be observed in addition to the installation, operating and maintenance instructions:

- DIN VDE 0100-100
- DIN EN 60204-1
- DIN EN ISO 13857
- DIN EN ISO 12100
- DIN EN 12101-3
- VDMA 24186-1
- Nameplate

MPC F400-120

2.2. Provisions and regulations

When properly installed and operated, the device complies with the applicable standards and EU Directive at the time of its placing on the market.

In addition, observe generally valid, legal and other binding regulations of the European or national legislation as well as the regulations in your country for accident prevention and environmental protection.

2.3. Warranty and liability

Our devices are manufactured to the highest technical level in accordance with the generally accepted rules of technology. They are subject to constant quality controls. Because the products are being constantly developed, we reserve the right to make changes to the products at any time and without prior announcement. We assume no liability for the correctness or completeness of these installation, operating and maintenance instructions.

To ensure your warranty claims, it is imperative to provide a commissioning report and a maintenance record.

Warranty and liability claims for personal injury and property damage are excluded if they are due to one or more of the following causes:

- Improper use
- Improper mounting, commissioning, operation and maintenance
- Operating the device with defective and / or non-functional safety and protective devices
- Failure to observe the instructions regarding transportation, installation, operation and maintenance
- Unauthorized structural changes to the device
- Poor monitoring and replacement of maintenance parts
- Improperly performed repairs
- Disasters and force majeure

3. GENERAL SAFETY INSTRUCTIONS

Planners, plant engineers and operators are responsible for ensuring that the product is installed and operated correctly.

- Use our devices only in perfect technical condition.
- Check the device for obvious defects, such as cracks in the housing or missing rivets, screws, caps or other application-relevant defects.
- Only use the device in the power range specified in the technical data and on the nameplate.
- Protection against contact and being sucked in and safety distances should be provided in accordance with DIN EN 13857.
- Generally prescribed electrical and mechanical protection devices are to be provided by the client.
- Safety components must not be bypassed or put out of operation.
- The product may be operated by personnel with limited physical, sensory or mental capacities only if they are supervised or have been instructed by responsible personnel.
- Children must be kept away from the product.

MPC F400-120

3.1. Intended use

Our devices are incomplete machineries as defined in the EU Machinery Directive 2006/42/EC (partly completed machinery). The product is a not ready-for-use machine in terms of the machine directive.

It is intended exclusively for installation in a machine or in ventilation equipment and installations or for combination with other components to form a machinery or installation. The product may be commissioned only if it is integrated in the machinery/system for which it is designed and the machinery/system fully complies with the EC machinery directive.

Observe the operating conditions and performance limits specified in the technical data.

Conveying and ambient temperatures must be observed according to the technical data and the nameplate.

Intended use also implies that you have fully read and understood this manual.



Improper use may result in danger to the life and limb of the user or third parties or damage to the system or other property.

3.2. Improper use

Any use of the product other than described in chapter "Intended use" is considered as improper.

The following points are improper and dangerous:

- Delivery of explosive and flammable media or operation in potentially explosive atmospheres.
- Delivery of aggressive and abrasive media.
- Operation without the duct system.
- Operation with closed air connections.
- The use on vehicles, aircrafts and ships.

3.3. Personnel qualifications

Assembly, commissioning, operation, disassembly and service (including maintenance and repair) require basic mechanical and electrical knowledge, as well as knowledge of the appropriate technical terms. In order to ensure operating safety, these activities may therefore only be carried out by qualified technical personnel or a person under the direction and supervision of qualified personnel. Qualified personnel are those who can recognize possible hazards and institute the appropriate safety measures due to their professional training, knowledge, and experience, as well as their understanding of the relevant conditions pertaining to the work to be done. Qualified personnel must observe the rules relevant to the subject area.

3.4. Safety instructions in this manual

In this manual, there are safety instructions before the steps whenever there is a danger of personal injury or damage to the equipment. The measures described to avoid these hazards must be observed.

Safety instructions are set out as follows:

Safety sign (warning triangle) - Draws attention to the risk.

- Type of risk! - Identifies the type or source of the hazard.
- » Consequences - Describes what occurs when the safety instructions are not complied with.
- Precautions - States how the hazard can be avoided.

MPC F400-120

Safety sign (warning triangle)



General warning!

Indicates possible hazardous situations. Failure to observe the warnings may result in personal injury and / or damage to property.



Electricity warning (hazardous voltage)!

Indicates possible hazards due to electricity. Failure to observe the warnings may result in death, injury and/or damage to property.



Hot surface warning!

Indicates possible hazards due to high surface temperatures. Failure to observe the warnings may result in personal injury and/or damage to property.



Finger-Crushing Warning!

Indicates possible hazards due to moving and rotating parts. Failure to observe the warnings may result in personal injury.



Overhead load warning!

Indicates possible hazards due to overhead loads. Failure to observe the warnings may result in death, injury and/or damage to property.



Follow important information!

Instructions for safe, optimum use of the product.

4. ADHERE TO THE FOLLOWING INSTRUCTIONS

4.1. General instructions

- Persons who assemble, operate, disassemble or maintain our devices must not be under the influence of alcohol, drugs or pharmaceuticals that may affect perception and responsiveness.
- Responsibilities for the operation, maintenance and regulation of the product should be clearly determined and observed so that there can be no unclear areas of responsibility with regard to safety.

4.2. Indications assembly

- Disconnect all of the product's poles from the mains before installing the product or connecting or removing plugs. Make sure that the product cannot be switched back on again.
- Lay cables and lines so that they cannot be damaged and no one can trip over them.
- Information signs must not be changed or removed.

4.3. Indications Commissioning

- Make sure that all electrical connections are either used or covered. Commission the product only if it is installed completely.
- The power switch must always be fully functional and easy accessible!

4.4. Indications during operation

- Only authorized personnel is allowed to operate the setting mechanisms of the components or parts, under the provision that the system is used as intended.
- In an emergency, or if there is a fault, or other irregularities, switch the equipment off and make sure it cannot be switched back on again.
- The technical data given on the rating plate must not be exceeded.

MPC F400-120

4.5. Icons



- General warning
- » Failure to observe the warnings may result in personal injury and / or damage to property.
- Unauthorized repairs may cause personal injury and / or damage to property, in which case the manufacturer's guarantee or warranty will not apply.



- Electricity warning (hazardous voltage)!
- » Failure to observe the hazard may result in death, injury or damage to property.
- Before performing any work on conductive parts, always disconnect the unit completely from the electricity supply and make sure that it cannot be switched back on again.



- Caution! Burning hazard.
- » Failure to observe the hazard may result in personal injury and/or damage to property.
- Do not touch the surface until the motor and heater have cooled.



- Never reach into the impeller or other rotating or moving parts.
- » Failure to observe the hazard may lead to serious injury.
- Work may only be performed once the impeller has come to a complete halt.



- Never reach into the impeller or other rotating or moving parts.
- » Failure to observe the hazard may lead to serious injury.
- Work may only be performed once the impeller has come to a complete halt.



- Never clean the internal space with flowing water or a high-pressure cleaner. Do not use aggressive or easily flammable products for cleaning (impellers/housing).
- Only use mild soapsuds. The impeller should be cleaned with a cloth or brush.

5. PRODUCT INFORMATION

Description:

- Fan for exhaust applications
- Conveyed exhaust up to 200 °C
- Radial impeller
- With condensate drain
- Motor outside the air stream (VDI 2052))
- Motor protection on site
- Insulated design approved for indoor installation
- Tested according to EN 12101-3

This exhaust box with smoke extraction function can reliably deliver up to 400°C hot combustion gases in case of fire for 2 hours. After the fire the roof fan must be replaced. Recurring operation at 400 °C is not allowed.

The housing is made of galvanized sheet steel. The backward curved impeller is made of powder-coated sheet steel. The built-in 3-phase motor with IE-3 classification can only be controlled by means of a frequency converter!

MPC F400-120

MPC...T

Double wall cubic housing made of galvanized sheet steel with 30 mm thick mineral wool insulation, non-flammable according to DIN EN 13501-1, class A1. Device bottom with integrated base pan and condensate drain.

For cleaning and maintenance work, the full-surface inspection door can be removed using the door handle. The door handle is included loose and can be mounted on the desired side. The side walls as well as the cover can be easily removed, thereby three different discharge directions are possible (left, right or up). The interior of the housing is completely smooth without protruding screws. The side walls are screwed into the housing frame, so that no screws protrude into the housing interior. Variable design of the discharge, this can be carried out on site by placing the inlet spigot based on the choice of the air flow direction.

The back curved high-performance impeller consists of powder-coated sheet steel and is mounted on the shaft of a standard three-phase motor. Impeller dynamically balanced in 2 planes according to quality standard G 6.3, DIN ISO 1940. The ball-bearings are maintenance-free and lifetime lubricated. The motor is located outside the airflow.

5.1. Permissible conveying medium temperatures

| Series | perm. temperature / time in smoke extraction | perm. temperature in continuous operation |
|-----------|--|---|
| ■ MPC...T | +400°C / 120 min | -20°C bis +200°C |

5.2. Certification

The testing and factory certification required by EN 12101-3:2015 was carried out at the Slovenian National Building and Civil Engineering Institute (ZAG).

Certificate Number: 1404-CPR-3071

To find under: www.zag.si/en/certificates

6. NAMEPLATE

ATTENTION! The information on the nameplate must always be observed!

The nameplate contains the following information:

- Grounding: CE mark
- Catalog item number: MPC 315 D2 F4 T30
- Technical specifications: 400V 3~Y, 50Hz, I_{max} 2,4A, t_A/t_M 60/200°C, P_{1N} 1208W, n_N 2860 1/min, ISO F
- SN 181024-Q00000-123, ID 146 446, 24.10.2018
- ErP 2015
- Air direction arrow

Legend:

- I_{max} Max. current consumption
- t_A / t_M Max. ambient temperature / Max. medium temperature
- P_{1N} Rated power consumption
- n_N Rated speed
- IPX4 IP protection complete device
- ISO F Insulation class motor
- ErP Data ErP Conformity, if required according to Reg. 327/2011
- η Overall efficiency
- N Efficiency at the optimum energy efficiency
- ID Item number
- SN Serial number


MPC F400-120

7. TECHNICAL DATA

| Type | ID | Voltage U_N V | Frequency f_N Hz | Rated power consumption P_N W | Max. motor current I_{max} A | Max. ambient temperature t_A °C | Max. medium temperature t_M °C | Sound power casing dB(A) | Sound power inlet dB(A) | Sound power outlet dB(A) | Wiring diagram | Weight kg |
|-------------------|--------|--------------------|-----------------------|------------------------------------|-----------------------------------|--------------------------------------|-------------------------------------|-----------------------------|----------------------------|-----------------------------|----------------|--------------|
| MPC 225 D2 F4 T30 | 146426 | 400V 3~Y | 50 | 440 | 0,9 | 60 | 200 | 73 | 80 | 83 | 146221 | 35,0 |
| MPC 250 D2 F4 T30 | 146434 | 400V 3~Y | 50 | 692 | 1,2 | 60 | 200 | 73 | 82 | 84 | 146221 | 35,0 |
| MPC 280 D2 F4 T30 | 146443 | 400V 3~Y | 50 | 686 | 1,3 | 60 | 200 | 73 | 82 | 85 | 146221 | 36,0 |
| MPC 315 D2 F4 T30 | 146446 | 400V 3~Y | 50 | 1208 | 2,5 | 60 | 200 | 75 | 85 | 88 | 146221 | 44,4 |
| MPC 315 D4 F4 T30 | 146453 | 400V 3~Y | 50 | 221 | 1,1 | 60 | 200 | 68 | 78 | 81 | 146221 | 40,0 |
| MPC 355 D4 F4 T30 | 146465 | 400V 3~Y | 50 | 338 | 1,4 | 60 | 200 | 76 | 79 | 84 | 146221 | 63,0 |
| MPC 400 D4 F4 T30 | 146472 | 400V 3~Y | 50 | 564 | 1,1 | 60 | 200 | 69 | 74 | 76 | 146221 | 65,0 |
| MPC 450 D4 F4 T30 | 146474 | 400V 3~Y | 50 | 967 | 2,5 | 60 | 200 | 73 | 82 | 85 | 146221 | 73,0 |
| MPC 500 D4 F4 T30 | 146476 | 400V 3~Y | 50 | 1440 | 2,9 | 60 | 200 | 77 | 86 | 86 | 146221 | 75,0 |
| MPC 560 D4 F4 T30 | 146478 | 400V 3~Y | 50 | 2661 | 5,0 | 60 | 200 | 76 | 85 | 88 | 146221 | 127,0 |
| MPC 630 D4 F4 T30 | 146481 | 400V 3~Y | 50 | 4325 | 8,8 | 60 | 200 | 79 | 89 | 92 | 146221 | 140,0 |

8. DIMENSIONS

MPC...D.F4 T30

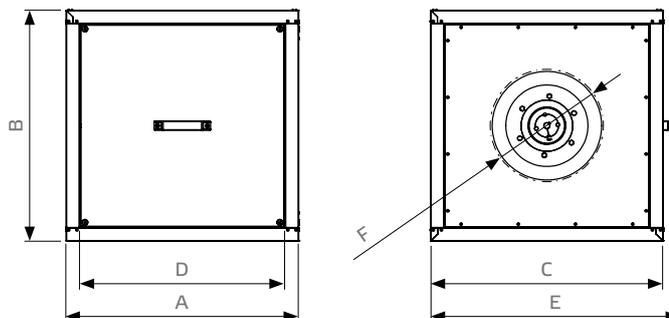

| ID | A mm | B mm | C mm | D mm | E mm | Anschlussmaß Innen F mm |
|--------|---------|---------|---------|---------|---------|----------------------------|
| 146426 | 500 | 500 | 500 | 417 | 552 | min. 195 |
| 146434 | 500 | 500 | 500 | 417 | 552 | min. 220 |
| 146443 | 500 | 500 | 500 | 417 | 552 | min. 240 |
| 146446 | 500 | 500 | 500 | 417 | 552 | min. 270 |
| 146453 | 500 | 500 | 500 | 417 | 552 | min. 270 |
| 146465 | 700 | 700 | 700 | 617 | 752 | min. 300 |
| 146472 | 700 | 700 | 700 | 617 | 752 | min. 340 |
| 146474 | 700 | 700 | 700 | 617 | 752 | min. 385 |
| 146476 | 700 | 700 | 700 | 617 | 752 | min. 430 |
| 146478 | 900 | 900 | 900 | 817 | 952 | min. 465 |
| 146481 | 900 | 900 | 900 | 817 | 952 | min. 520 |

MPC F400-120

9. DATA IN ACCORDANCE WITH ERP DIRECTIVE 327/2011 OF THE EUROPEAN PARLIAMENT

| Units / Model | MPC 225 D2 F4 T30 | MPC 250 D2 F4 T30 | MPC 280 D2 F4 T30 | MPC 315 D2 F4 T30 | MPC 315 D4 F4 T30 |
|--|---|--|--|--|--|
| ID-number | 146426 | 146434 | 146443 | 146446 | 146453 |
| ErP-conformity | 2015 | 2015 | 2015 | 2015 | 2015 |
| 1 Overall efficiency η_{es} [%] | 53,1 | 58 | 56,5 | 61,4 | 52,6 |
| 2 Measurement category | A | A | A | A | A |
| 3 Efficiency category | Static | Static | Static | Static | Static |
| 4 Efficiency grade at optimum energy efficiency point N | 68,7 | 71,7 | 68,3 | 71 | 70 |
| 5 Variable speed drive | not integrated / has to be installed ! | not integrated / has to be installed ! | not integrated / has to be installed ! | not integrated / has to be installed ! | not integrated / has to be installed ! |
| 6 Year of manufacture | see nameplate | | | | |
| 7 Manufacturer name / Commercial registration number / Place of establishment | ruck Ventilatoren GmbH / Local District Court Mannheim HRB 560367 / Germany | | | | |
| 8 Nominal motor power input at optimum energy efficiency point P_e [kW] | 0,33 | 0,49 | 0,77 | 1,23 | 0,22 |
| 9 Volumetric flow at optimum energy efficiency point q_v [m ³ /h] | 1233 | 1771 | 2179 | 3128 | 1686 |
| 10 Static pressure at optimum energy efficiency point p_{sf} [Pa] | 478 | 555 | 700 | 860 | 232 |
| 11 Rotations per minute at the optimum energy efficiency point n [1/min] | 2915 | 2862 | 2761 | 2838 | 1478 |
| 12 The specific ratio | The specific ratio is close to 1 and significantly below 1.11. | | | | |
| 13 Information on dismantling, recycling and disposal | Observe the user manual of this product. | | | | |
| 14 Optimal life | Observe the user manual of this product. | | | | |
| 15 Description of additional items used when determining the fan energy efficiency, such as ducts, that are not described in the measurement category and not supplied with the fan. | No special items have been used for determining the fan energy efficiency, except the required connection components according to the measurement category. | | | | |

| Units / Model | MPC 355 D4 F4 T30 | MPC 400 D4 F4 T30 | MPC 450 D4 F4 T30 | MPC 500 D4 F4 T30 | MPC 560 D4 F4 T30 | MPC 630 D4 F4 T30 |
|--|---|--|--|--|--|--|
| ID-number | 146465 | 146472 | 146474 | 146476 | 146478 | 146481 |
| ErP-conformity | 2015 | 2015 | 2015 | 2015 | 2015 | 2015 |
| 1 Overall efficiency η_{es} [%] | 56,9 | 58,2 | 63,4 | 63,7 | 63,3 | 66,6 |
| 2 Measurement category | A | A | A | A | A | A |
| 3 Efficiency category | Static | Static | Static | Static | Static | Static |
| 4 Efficiency grade at optimum energy efficiency point N | 72,4 | 71,7 | 74 | 72,3 | 69,4 | 69,9 |
| 5 Variable speed drive | not integrated / has to be installed ! | not integrated / has to be installed ! | not integrated / has to be installed ! | not integrated / has to be installed ! | not integrated / has to be installed ! | not integrated / has to be installed ! |
| 6 Year of manufacture | see nameplate | | | | | |
| 7 Manufacturer name / Commercial registration number / Place of establishment | ruck Ventilatoren GmbH / Local District Court Mannheim HRB 560367 / Germany | | | | | |
| 8 Nominal motor power input at optimum energy efficiency point P_e [kW] | 0,34 | 0,51 | 0,97 | 1,51 | 2,59 | 4,81 |
| 9 Volumetric flow at optimum energy efficiency point q_v [m ³ /h] | 2331 | 2988 | 4565 | 5879 | 8551 | 12322 |
| 10 Static pressure at optimum energy efficiency point p_{sf} [Pa] | 280 | 340 | 476 | 576 | 686 | 953 |
| 11 Rotations per minute at the optimum energy efficiency point n [1/min] | 1467 | 1450 | 1468 | 1450 | 1436 | 1449 |
| 12 The specific ratio | The specific ratio is close to 1 and significantly below 1.11. | | | | | |
| 13 Information on dismantling, recycling and disposal | Observe the user manual of this product. | | | | | |
| 14 Optimal life | Observe the user manual of this product. | | | | | |
| 15 Description of additional items used when determining the fan energy efficiency, such as ducts, that are not described in the measurement category and not supplied with the fan. | No special items have been used for determining the fan energy efficiency, except the required connection components according to the measurement category. | | | | | |

MPC F400-120

10. TRANSPORT AND STORAGE

Transport and storage should only be performed by specialist personnel in accordance with the assembly and operating manual and regulations in force.

The following points should be noted and followed:

- Check the delivery according to the delivery note to ensure it is complete and correct and check for any damage. Any missing quantities or damage incurred during transport should be confirmed by the carrier. No liability is accepted if this is not observed.
- For weight see technical data
- It should be transported with suitable lifting equipment in the original packaging or on the transport equipment indicated.
- If transported with a forklift, it should be ensured that the product is resting with the basic profile or base frame completely on the forks or on a pallet and the product's centre of gravity is between the forks.
- The driver must be authorized to drive a forklift.
- Do not go beneath the suspended load.
- Avoid damage or deformation of the housing.
- The product must be stored in a dry area and protected from the weather in the original packaging. Open pallets should be covered with tarpaulins. Even weatherproof modules should be covered because their weather resistance is only guaranteed after complete installation. If moisture has penetrated into the original packaging, remove it immediately.
- Storage temperature between +5 °C and +40 °C. Avoid severe temperature fluctuations.
- If the product has been in storage for more than a year, check the smooth running of impellers and valves by hand.

11. ASSEMBLY

Assembly work may only be performed by specialist personnel in accordance with the installation and operating manual and the regulations and standards in force.


The following points should be noted and followed:

- The foundation must be even and levelled. It must not exhibit unevenness or a slope in any direction.
- Set up and align the machine with the aid of a water level. A perfect function of the device can be guaranteed only if levelled mounted.
- Only suitable installation aids, in accordance with regulations, should be used.
- The device must be installed in such a way that it is easily accessible for maintenance and cleaning purposes.
- The unit should only be installed with authorized and suitable fastening materials at all fastening points.
- Do not distort the unit when installing.
- Just use the indicated mounting and fixing places. No holes should be made in the housing or any screws screwed into it.
- The duct system must not be supported on the housing.
- For structure-borne sound decoupling, a flexible connection is recommended when connected on a duct system.


MPC F400-120

11.1. Mounting position


A Delivery status
Discharge up

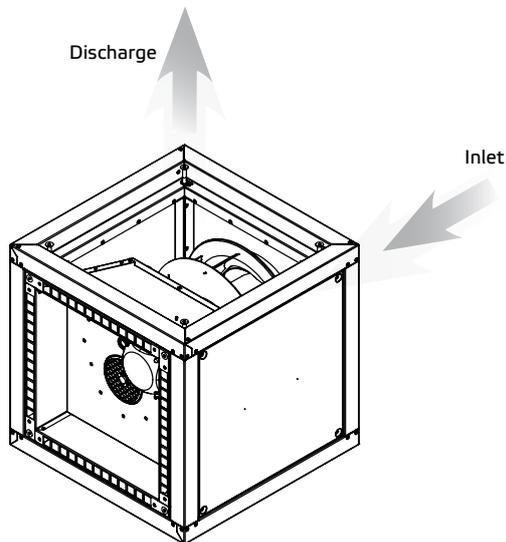


B In order to change the discharge side, the panels or a panel must be removed.

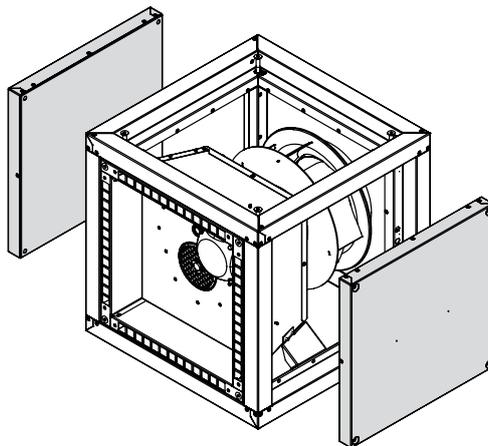

c Discharge left

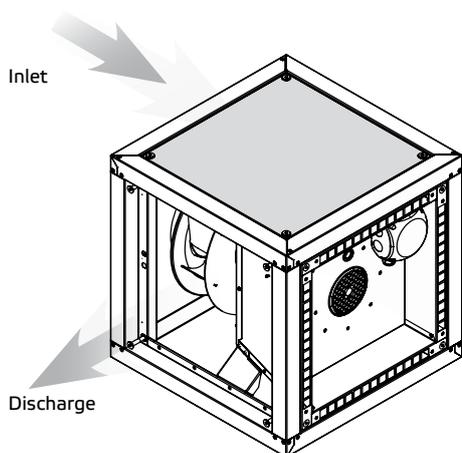

D Discharge right

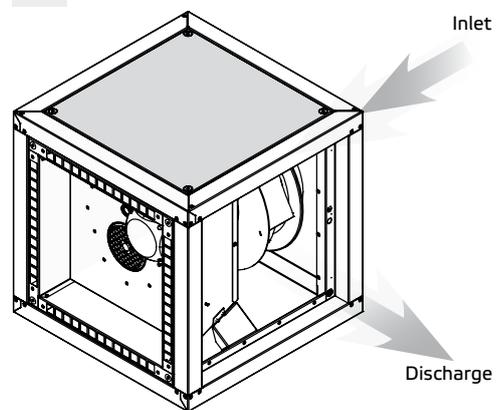


By closing an open side, the discharge side can be changed.

MPC F400-120

11.2. Impeller installation with Taperlock clamping bush

The impeller is connected by means of the clamping bush to the shaft end of the drive motor.

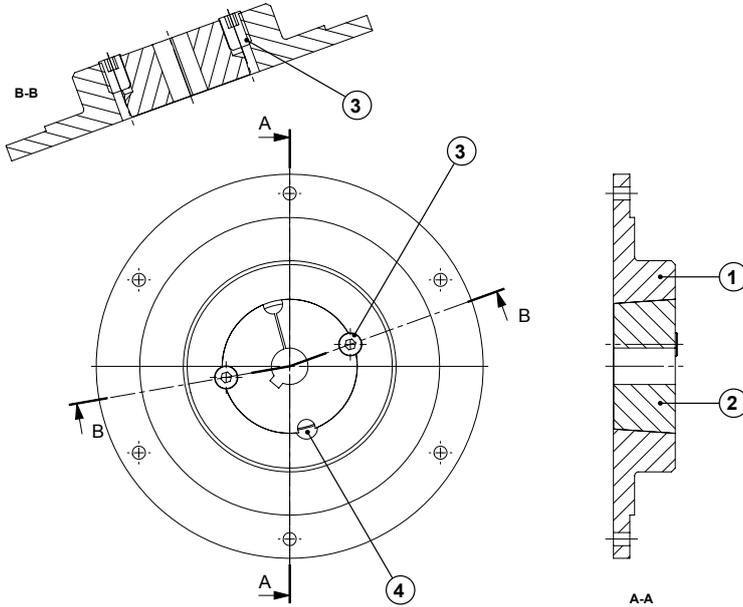


Assembly

1. Clean all bare surfaces (mating surfaces of the clamping bushings and motor shaft).
2. Insert the clamping bush (1) into the hub (2) and bring the holes into alignment.
3. Loosely lubricate the threaded pins (3) and screw in - do not tighten yet.
4. Push the impeller onto the shaft with the clamping sleeve, align it in the axial position and tighten the threaded pins evenly on both sides. Observe the tightening torque according to table.

Disassembly

1. Loosen all the threaded studs (3) and screw them out completely. Lubricate a threaded pin and screw it into the disassembly hole (4).
2. Tighten the threaded pin until the clamping bush (1) is released from the hub (2).
3. The impeller can be removed.

Technical data

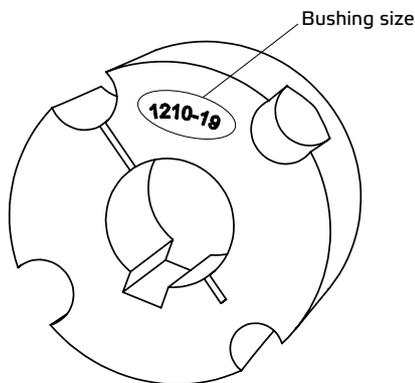

Torque table

| Bushing size | 1210 | 2012 | 2517 |
|--|------|------|------|
| Screw tightening torque with feather (Nm) | 17 | 26 | 41 |
| Screw tightening torque without feather (Nm) | 20 | 31 | 48 |
| Number of screws | 2 | 2 | 2 |

Commissioning (after replacement)

- Remove any remaining installation material and foreign objects from the impeller and suction area.
- Check direction of rotation (direction of rotation arrow on the impeller base disc).
- During initial commissioning, the entire unit must be checked for mechanical vibrations. If necessary, re-balancing must be carried out.
- Pay attention to a quiet operation, without vibrations.

MPC F400-120

12. ELECTRICAL CONNECTION



- Electricity warning (hazardous voltage)!

- » Failure to observe the hazard may result in death, injury or damage to property.

- Before performing any work on conductive parts, always disconnect the unit completely from the electricity supply and make sure that it cannot be switched back on again.

The electrical installation may only be carried out by qualified electricians in compliance with the installation, operating and maintenance instructions and the applicable national regulations, standards and guidelines:

- ISO, DIN, EN and VDE specifications, including all safety requirements.
- Technical connection conditions.
- Safety at work and accident prevention requirements.

This list does not claim to be complete.

Requirements should be applied under one's own personal responsibility.

- The electrical connections must be made as shown in the corresponding wiring diagrams and terminal diagrams.
- The type of cable, size of cable and method of laying should be determined by an authorized electrician.
- Low and extra-low voltage cables should be laid separately.
- An all-pole mains disconnection device with at least 3 mm contact gap must be provided in the supply line.
- Use a separate cable inlet for each cable.
- Any cable inlets that are not used must be sealed so that it is airtight.
- All cable inlets must have strain relief.
- Create equipotential bonding between the unit and the duct system.
- Check all protective measures after the electrical connection work (earthing resistance, etc.)
- Motor current and motor power must not exceed the values stated on the motor nameplate. The specified max. fan speed must never be exceeded, otherwise the motor and fan will be destroyed by this overload and dissolved or flying parts can destroy other components.

12.1. Unit supply cable

Connect the mains supply cable as shown in the wiring diagram. For the dimensioning of the line, observe the unit's rating plate and the relevant guidelines. Appropriate protection with correctly dimensioned automatic safety breakers (circuit protection breaker) must be provided.

12.2. Frequency converter

If the exhaust air boxes of the MPC...T series are placed on the EU market or operated within the EU, they must have a speed control. This is only possible by means of frequency converters. Using other speed controls, such as voltage control, will directly damage the motor.

We offer tested and approved frequency converters as accessories. These are pre-programmed and delivered exactly matched to the respective engine power and speed.

MPC F400-120

If third-party products are used, the following parameters must be set correctly.

| Type | ID | Frequency f_N | Frequency f_{max} | Max. motor current I_{max} 3~400V Y | Max. motor current I_{max} 3~230V D |
|-------------------|--------|-----------------|---------------------|--|--|
| | | Hz | Hz | A | A |
| MPC 225 D2 F4 T30 | 146426 | 50 | 60 | 1,1 | 1,9 |
| MPC 250 D2 F4 T30 | 146434 | 50 | 60 | 1,4 | 2,4 |
| MPC 280 D2 F4 T30 | 146443 | 50 | 50 | 1,5 | 2,6 |
| MPC 315 D2 F4 T30 | 146446 | 50 | 50 | 2,7 | 4,7 |
| MPC 315 D4 F4 T30 | 146453 | 50 | 80 | 1,3 | 2,3 |
| MPC 355 D4 F4 T30 | 146465 | 50 | 70 | 1,6 | 2,8 |
| MPC 400 D4 F4 T30 | 146472 | 50 | 50 | 1,3 | 2,3 |
| MPC 450 D4 F4 T30 | 146474 | 50 | 55 | 2,7 | 4,7 |
| MPC 500 D4 F4 T30 | 146476 | 50 | 50 | 3,1 | 5,4 |
| MPC 560 D4 F4 T30 | 146478 | 50 | 50 | 5,2 | 9 |
| MPC 630 D4 F4 T30 | 146481 | 50 | 50 | 9 | 15,6 |

12.3. Fault current protection switch

The use of a fault current protection switch is not mandatory. If a fault current protection switch is used, only AC/DC sensitive RCD protective devices (type B or B+) are permitted.



Even when the device is switched off, voltage is applied to terminals and connections. Do not touch the device for 5 minutes after all-pole disconnection from the mains.


12.4. Thermal motor protection

During operation, electric motors heat up. Under certain circumstances (excessively high ambient or fluid temperatures, heavy contamination, etc.), the motor temperature may exceed the safety limit of the electrically isolated parts. In order to avoid engine damage, various types of temperature monitoring are possible, of which at least one must be installed on site:

- Monitoring of the thermal motor current via a FU
- Motor protection switch

12.5. Electrical connection / wiring diagram


The device must be connected according to the wiring diagram. For fans which are controlled by external control devices, the corresponding operating instructions of the manufacturer must be observed.

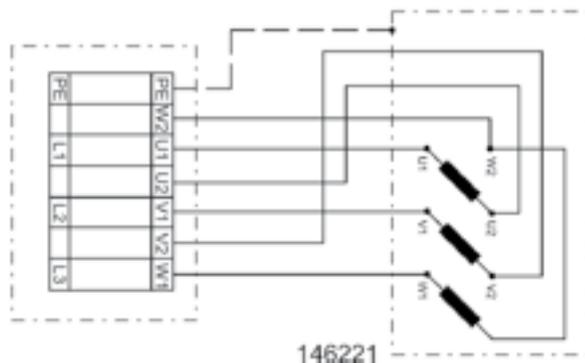

MPC F400-120

12.6. Star circuit / Delta circuit

■ Star circuit

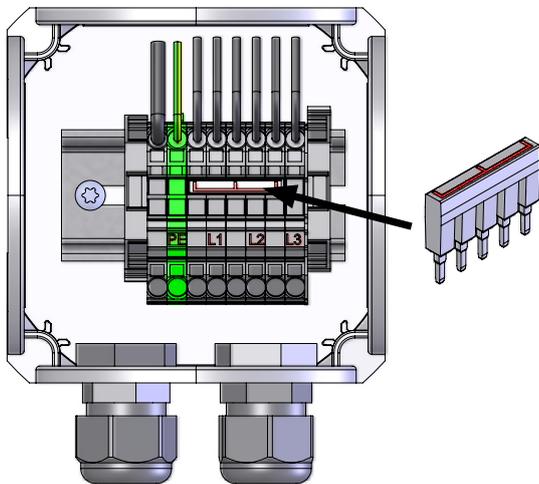

For the star circuit, the terminals U2, V2 and W2 are connected through the shorting blades (see Img.).


Never connect both jumpers at the same time!



The star circuit must be used if the motor is to be operated directly on the 3-phase supply network with a line voltage of 400V.

The star circuit is also to be used when controlling via a frequency inverter with 400V output voltage (usually a frequency converter with 3-phase 400V mains connection).

■ Delta circuit

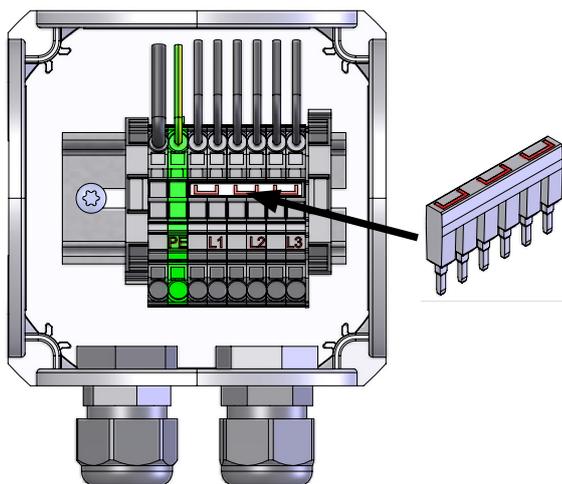

For the delta circuit, the shorting blades are connecting U1 with W2, V1 with U2 and W1 with V2 (see Img.).

Never connect both jumpers at the same time!



The delta circuit must be used if the motor is to be operated directly on the 3-phase supply network with a line voltage of 230V.

The star circuit is also to be used when controlling via a frequency inverter with 230V output voltage (in general frequency converter with 1-phase 230V mains connection).



If, in spite of the correct connection to the mains or to the frequency converter, the devices turn contrary to the given direction of rotation, this must be corrected. For this purpose two phases can be interchanged at the terminal block (e.g. L1 with L2 or L2 with L3). Afterwards the direction of rotation is to be checked again.

For the electrical connection, for the setting of the motor protection switch or for the parameterization of a frequency inverter, only the technical data on the nameplate of the fan are relevant. These may differ from the technical data of the motor.

MPC F400-120

13. COMMISSIONING



- Electricity warning (hazardous voltage)!
 - » Failure to observe the hazard may result in death, injury or damage to property.
 - Before performing any work on conductive parts, always disconnect the unit completely from the electricity supply and make sure that it cannot be switched back on again.



- Never reach into the impeller or other rotating or moving parts.
 - » Failure to observe the hazard may lead to serious injury.
 - Work may only be performed once the impeller has come to a complete halt.



- Caution! Burning hazard.
 - » Failure to observe the hazard may result in personal injury and/or damage to property.
 - Do not touch the surface until the motor and heater have cooled.

Commissioning by trained technical personnel may only be performed after any risk has been ruled out. The following checks should be performed in accordance with the installation and operating manual and the regulations in force:

- Correctly sealed installation of the unit and duct system.
- Check the duct system, unit and medium lines, if present, remove any foreign bodies if necessary.
- The intake opening and inflow into the unit must be clear.
- Check all mechanical and electrical protection measures (e.g. earthing).
- Voltage, frequency and type of current must correspond with the rating plate.

14. MAINTENANCE AND CLEANING

- Make sure that no connections or components are loosened unless the device is disconnected from the mains. Make sure that the equipment cannot be switched back on again.
- Individual components must not be interchanged. For example, the components intended for one product may not be used for other products.
- The regular maintenance and care of our devices is designed to ensure proper function, value retention and avoidance of damage. Keep a maintenance log.
- Perform the specified maintenance on the unit at the specified intervals.

14.1. Checklist Maintenance and Service

| Description | Months |
|---|----------------|
| Triggering device | monthly |
| ■ Fan | |
| Check fan for function and operational readiness (test run at least 15 minutes) | every 6 months |
| Check fan for function and operational readiness (test run at least 1 hour) | yearly |
| Check for dirt, damage, corrosion and fastening | every 6 months |
| Function-preserving cleaning | every 6 months |
| Check impeller rotation direction | yearly |
| Check flexible connections for leaks | yearly |
| Check impeller for imbalance | yearly |
| Check protective device for function | yearly |
| ■ Motor | |
| Check externally for dirt, damage, corrosion and fastening | every 6 months |
| Function-preserving cleaning | yearly |
| Check bearing for noise | yearly |
| Check terminals for tight fit | yearly |
| Measure the voltage | yearly |

MPC F400-120

14.2. Cleaning and care

Servicing, troubleshooting and cleaning may only be performed by specialised personnel in accordance with this installation and operating manual and the regulations in force.

Our devices require little maintenance when operated properly.

The following work should be performed at regular intervals, in accordance with health and safety regulations:

- Check the operation of the control system and safety devices.
- Check electrical connections and wiring for damage.
- Remove any dirt from the fan impeller or impellers and from inside the fan housing in order to prevent any unbalance or reduction in output.
 - Do not use aggressive or easily flammable products for cleaning (impellers/housing).
 - Preferably only water (not flowing water) or mild soapsuds should be used.
 - The impeller should be cleaned with a cloth or brush.
 - Never use a high-pressure cleaner.
 - Balancing clips must not be moved or removed.
 - The impeller and fittings must not be damaged in any way.

Before putting the unit back into operation after maintenance and servicing work, carry out a visual inspection as described in section 12 and 13.

15. LIFETIME AND DISPOSAL

15.1. Product life

The motors are equipped with maintenance-free, permanently lubricated ball bearings. Under normal operating conditions, the expected lifetime is about 30,000 operating hours.

The information given here depends strongly on the respective field of application as well as the environmental conditions. We recommend replacing these fans after reaching about 30,000 operating hours or 5 years.

15.2. Decommissioning and disposal



When disassembling, parts under voltage are exposed, which can lead to electric shock when touched. Before dismantling, disconnect the fan from all poles of the mains and secure against being switched on again!

Parts and components of the device that have reached their lifetime, e.g. due to wear, corrosion, mechanical stress, fatigue and/or all other, not directly recognizable effects, The same applies to excipients in use such as oils and fats or other substances. The conscious or unconscious reuse of used components such as e.g. impellers, rolling bearings, motors. etc. can lead to a risk to persons, the environment as well as machinery and equipment. The applicable local operating regulations must be observed and applied.

15.3. Spare parts (motor + impeller)

Only original spare parts may be used.

The repair may only be carried out by personnel trained and authorized.

MPC F400-120

| Fault | Possible cause | Remedy methods |
|---|---|---|
| <ul style="list-style-type: none"> ■ Fan does not start | <ul style="list-style-type: none"> ■ No power supply ■ Impeller does not rotate freely | <ul style="list-style-type: none"> ■ Check mains supply / connections ■ Check the causes and, if possible, remove them. If not possible, contact the supplier. |
| <ul style="list-style-type: none"> ■ Engine overheated / temperature protection is switched on | <ul style="list-style-type: none"> ■ Fault of the ball bearings ■ Too high operating temperature ■ Air flow is too low, motor cannot cool down | <ul style="list-style-type: none"> ■ Contact the supplier ■ Observe the data on the nameplate ■ See fault „Low air flow“ |
| <ul style="list-style-type: none"> ■ Abnormal noises / vibrations | <ul style="list-style-type: none"> ■ Dirt deposits on the impeller ■ Imbalance of the impeller ■ Connection with intake or exhaust pipe causes vibrations and oscillations ■ Fixing screws released ■ Fault of the ball bearings ■ Loose impeller blade | <ul style="list-style-type: none"> ■ See chapter maintenance and cleaning ■ Contact the supplier ■ Install fan with vibration dampers ■ Tighten screws ■ Contact the supplier ■ Contact the supplier |
| <ul style="list-style-type: none"> ■ Low airflow | <ul style="list-style-type: none"> ■ Impeller runs in the wrong direction (wrong air transport direction) ■ High pressure losses in the system ■ Back flow shutter flaps not at all or only partially open ■ Inlet clogged ■ Speed control incorrectly set / incorrectly connected | <ul style="list-style-type: none"> ■ Note the marking on the device / nameplate. Check electrical connections ■ Improve piping configuration or select a more powerful fan ■ Check the backflow flap on site ■ Remove blockage ■ Check settings / switching unit and possibly adjust / connect |